
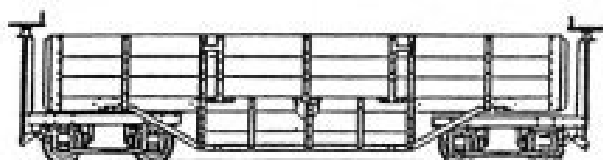


W021 (31)

War Dept. (WW1) class 'D' 10 ton bogie dropside wagon. White metal body and bogies with plywood floor. Fully illustrated instructions.

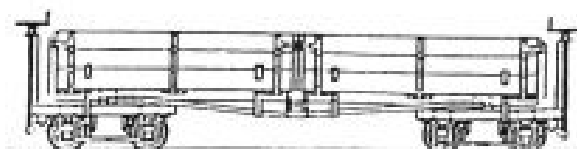

W022 (33)


WD class 'E' 10 ton drop door well wagon. White metal castings, bogies and plywood floor. Fully illustrated instructions.

W972 (3)

Conversion pack : Converts **W022** to 'D' class single drop door type

W023 (21)

WD Hudson twin bolster set timber wagon. Complete kit with all castings, wire, couplings, etc. and instructions.

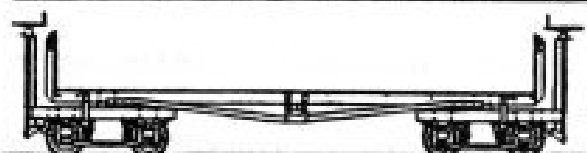

W026 (22)

WD class 'D' bogie flat wagon. White metal castings and bogies plus plywood floor. Fully illustrated instructions.





W171 (18)

Pair of Hudson bogies in white metal plus fully illustrated instructions.

W024 ()

WD class 'F' bogie stanchion well wagon. White metal castings and bogies. Fully illustrated instructions.

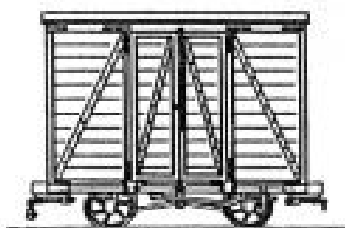
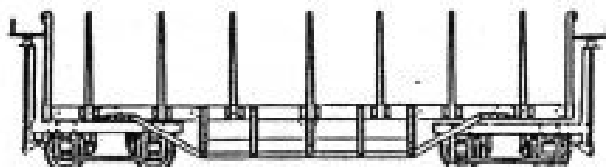


W033 (17)

Glyn Valley Tramway box van. This complete kit includes injection moulded sides and ends for the body, white metal under frame & brake gear, couplings and plasticard for roof and floor, brass wheel bearings. Correct 7 curved spoked wheels and instructions.

W034 (19)

Glyn Valley Tramway brake van. This complete kit includes injection moulded sides and ends for the body, white metal under frame & brake gear, couplings and plasticard for roof and floor, brass wheel bearings. Correct 7 curved spoked wheels and instructions.

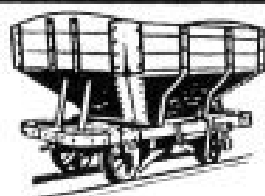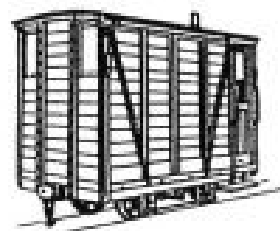

W035 (18)

Snailbeach District Railways hopper wagon. Complete kit with white metal castings, wheels, nickel silver strip, couplings, etc. plus fully illustrated instructions.