


- 9 **W052 (15)**
Industrial wagon, side-tipping skip type. Complete kit includes etched brass skip, white metal chassis, wheels and fully illustrated instructions.

W054 (16)

Pair of bogies based on **W052 (15)**. Complete kit.

W055 (16)

Pair of timber bolsters. Complete kit with white metal parts, wheels, wire, etc. plus illustrated instructions.

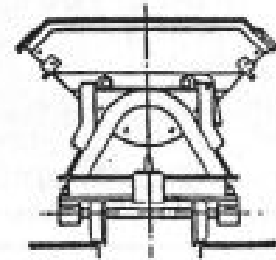

COACH and WAGON WHEELS

WCS1 (5) 12mmø, seven spoke

WCS2 (5) 10.5mmø, six spoke

WCS3 (5) 9mmø, seven spoke

WCS1-3 Are blackened steel - tyred wheels with plastic 'curly spoke' centres and pin-point axles. They are set to 16.5mm gauge (can be re-gauged to 14mm). Each set contains 8 wheels and 4 axles.

NAME and WORKS PLATES

WP1 ()

"Livingston Thompson" Set contains 2 name plates, 2 "Fairlies Patent" plates and 4 works plates. Also history and fixing & finishing instructions.

WP2 ()

"Talesin" Set contains 2 name plates, 2 "Fairlies Patent" plates and 2 works plates. Also history and fixing & finishing instructions.

A large range of **Name, Number and Work Plates** is coming soon. Watch model press for details. Insert to catalogue as they become available.


VEHICLE KITS

High Quality white metal kits with plated parts, some with transfers and synthetic rubber tyres


MOTORKITS



M006

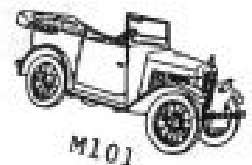

M101

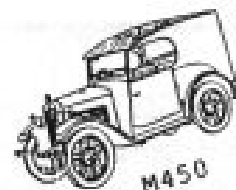

M450



M220

M001 (32)	Morris Minor 1931 soft top
M006 (37)	SS1 Airline Coupe 1935
M100 (30)	Amilcar Italiana Sports
M101 (30)	Morris Minor 1931 Open Tourer
M119 (27)	Austin 7 "Nippy" 1934
M199 (21)	Amilcar - chassis only
M220 (37)	Austin TT taxi 1933
M250 (40)	Morris Minor works fire engine
M450 (32)	Morris Minor 1931 van
M451 (35) *	Morris Minor 1931 van "Cooksey Wines"
M452 (35) *	Morris Minor 1931 van "Edward's Soups"
M510 (42)	Ford A box van 1931
M511 (45) *	Ford A box van 1931 "Carter Patterson"
M512 (45) *	Ford A box van 1931 "Allensbury's"
M545 (27)	Ford AA 2 ton (chassis)

* These kits include transfers